Care & Maintenance

Woven Resin & Rope



Walters^w

Woven Resin & Rope Care

Walters^w



Guidelines.

- · Do not use an abrasive cleaner, sponge, or steel brush.
- If preparing furniture for winter storage or other long-term storage, it's best to clean furniture prior to doing so.
- Contact Walters or your Dealer for information about custom-fit protective covers.

Woven Resin.

Walters' outdoor woven furniture is made using a durable, weatherproof resin that is designed specifically to withstand the demands of outdoor applications.

Under typical conditions, a regular maintainence routine will keep your woven resin furnishings looking their best season after season.

- A thorough cleaning 3 times a year is recommended to keep resin furnishings in their best condition.
- A solution of mild detergent and water will serve most maintenance needs. Rinse with water and dry thoroughly.
- We recommend a soft rag, sponge, or soft bristle brush to lift dirt and debris from the woven surface.
- Do not use bleach or heavy cleaning agents on woven resin, as these may damage the material.

Rope.

Our rope furnishings are woven using durable Titanpro®-designed PP Homopolymer rope, which is engineered with a strong UV, mold, and stain resistance.

Light Cleaning.

- · While dry, lightly brush any loose dirt or debris off the rope..
- A simple solution of 1:16 mild detergent to lukewarm water will serve most maintenance needs.
- Apply the solution generously, allowing the cleaning solution to soak into the rope.
- Gently clean soiled areas with a sponge or soft bristle brush to help lift more persistent stains.
- Avoid all abrasive products, including brushes with firm bristles, as these can cause fraying and wear to the rope fibers.
- Rinse thoroughly to remove any soap residue, allow time to air dry.

Stubborn Stains & Mildew.

- Prepare a solution of 4 teaspoons of household bleach and 1 teaspoon of mild detergent per 1-1/2 cups of lukewarm water.
- · Apply sparingly to soiled areas, allow to soak in for 15 minutes.
- Remove the stain with a sponge, clean towel or soft bristle brush.
- Rinse thoroughly to remove any soap and bleach residue, allow time to air dry.
- Any residual bleach left in the rope can cause premature deterioration. Prolonged exposure bleach is not recommended.

Walters^w







Walters"

walterswicker.com/materials